LED Moving Head

36*10w(ZOOM)

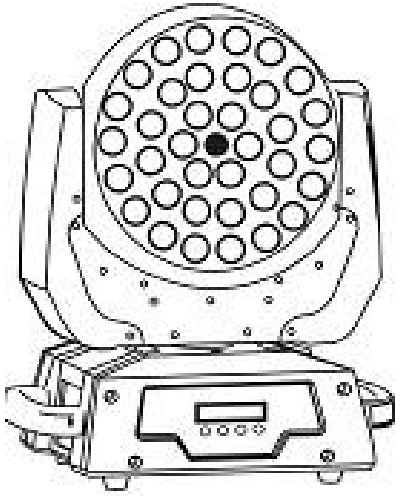

User Manual

KEEP THIS MANUAL FOR FUTURE NEEDS

Version 20

1. Dispacking

Thank you for choosing our moving head. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

This moving wash is made of a new type of high temperature strength of engineering plastics and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

The fixture adopts powerful LED lamps which features high brightness and stability. Please carefully dispack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:

Moving Head------- one Signal Cable----one
Omega Clamp------one User Manual----one
circus lifeline------one Hook-----one

10. Maintenance and Cleaning

The following points have to be considered during the inspection:

1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.

2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).

3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.

4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

CAUTION!
Disconnect from mains before starting maintenance operation.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
2) Clean the fan each week.
3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

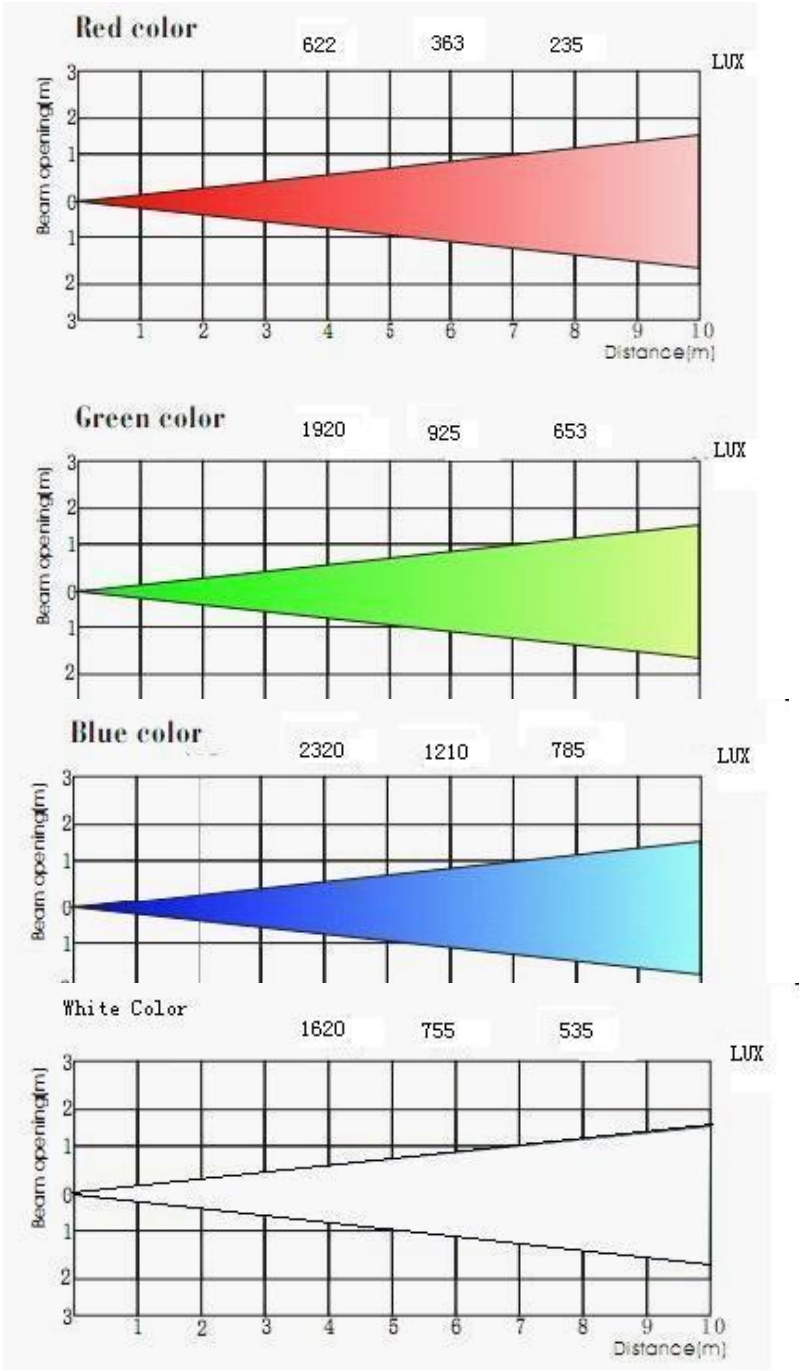

2. Safety Instructions

CAUTION!
Be careful with your operations. With a dangerous voltage you can Suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Important:
Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it.

Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard

3. Operation Instructions

-The moving head is an LED wash light for onsite decoration purpose.
-Don’t turn on the fixture if it’s been through severe temperature difference like after transportation because it might damage the light due to the environment changes. So make sure to operate the fixture until it is in normal temperature.
-This light should be keep away from strong shaking during any transportation or movement.
-Don’t pull up the light by only the head, or it might cause damages to the mechanical parts.
-Don’t expose the fixture in overheat, moisture or environment with too much dust when installing it. And don’t lay any power cables on the floor. Or it might cause electronic shock to the people.
-Make sure the installation place is in good safety condition before installing the fixture.
-Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
-Make sure the lens are in good condition. It’s recommended to replace the units if there are any damages or severe scratch.
-Make sure the fixture is operated by qualified personnel who knows the fixture before using.
-Keep the original packages if any second shipment is needed.
-Don’t try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
-It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

8. Technical Specifications

36PCS 10W high power LEDs
50,000 hours lifespan and low power consumption
16 bit smooth and precise resolution for PAN/TILT movement
540°/630° pan and 280° tilt movement
Scan position memory, auto reposition after unexpected movement
RGBW color mixing system

8.ZOOM:15 --60
LED dimming: DIM4 technology(adopt 4096 linearity dimmer)
LED rainbow effect
Macros effect
Strobe effect with 20 flashes per second and pulse effect
General dimming and blackout for all four colors
14 DMX channels
DMX512, master-slave and sound activated controllable or auto operation
Blue background LCD display

Input Voltage: AC90-240V. 50-60Hz
Fan standard :size: 90X90X25 – 60X60X15
Fuse standard(at the bottom): 3.15A/250V :
Power Consumption: 360W
Dimensions: 350x260x350mm
Packing Dimensions: 425x295x400mm
Net Weight: 9kgs
Gross Weight: 11kgs

Channel	Function	Value	Description
1	PAN	0-255	0---540/630
2	PAN 16bit	0-255	1.8 degree
3	Tilt	0-255	0---280
4	Tilt 16bit	0-255	1.8 degree
5	Dimmer	0--255	0~100%
6	Strobe	000-006	No function
		007-065	Slow to fast strobe
		066-069	No function
		070-128	Pulse strobe from slow to fast
		129-132	No function
		133-191	Strobe fading from slow to fast
		192-195	No function
		196-255	Strobe fading out from slow to fast
7	Red	0--255	0~100%
8	Green	0--255	0~100%
9	Blue	0--255	0~100%
10	White	0--255	0~100%
11	ZOOM	0--255	0~100%
12	Scan Speed	0--255	From fast slow
13	RGBW macro function	000-004	No macro function
		005-044	Eight kinds of fixed color
		045-049	No function
		050-094	Eight skip loop change color
		095-099	No function
		100-149	Eight kinds of circle color
		150-154	No function
		155-166	Red+green from dark to bright
		167-178	Green+red from bright to dark
		179-190	Green+blue from dark to bright
		191-202	Blue+green from bright to dark
		203-214	Blue+red from dark to bright
		215-226	Red+blue from bright to dark
		227-238	Red ,green+blue from dark to bright
		239-250	Blue+red from dark to bright at the same time green from bright to dark
		251-255	Output 100%at the same time
14	Reset/Auto	0--255	125-127Reset(3s). 250-255Auto

4. Installation via clamp

Please refer to the picture below:

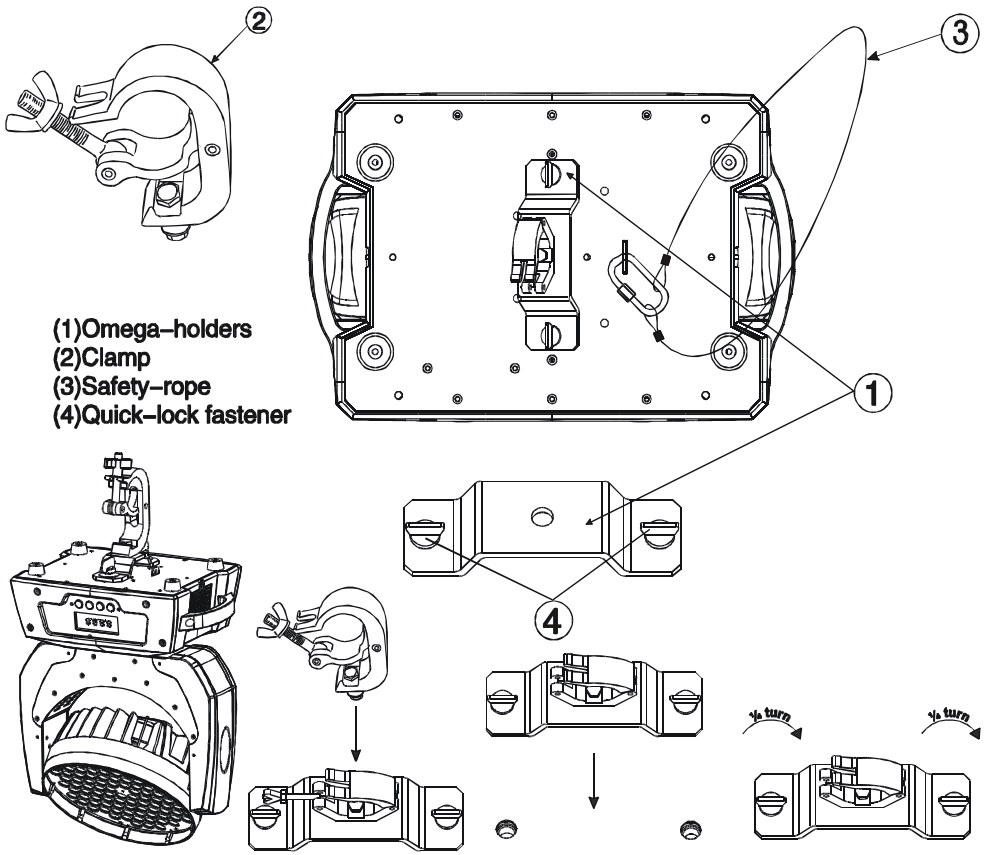

Screw one clamp each via a M12 screw and nut onto the Omega holders.

Insert the quick-lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick-lock fasteners fully clockwise. Install the second Omega holder.

Pull the safety-rope through the holes on the bottom of the base and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw.

5. DMX-512 control connections

Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.

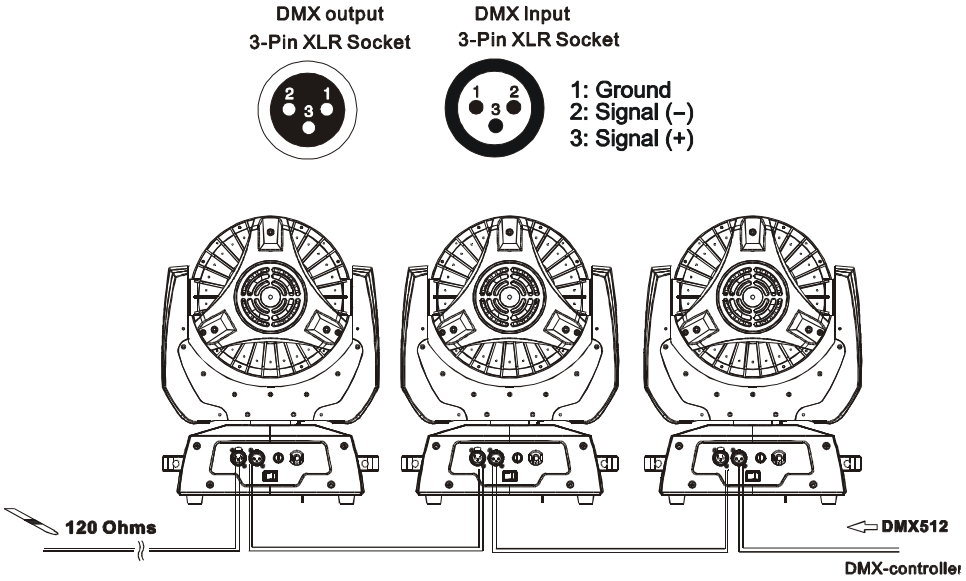

DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 ¦¸ resistor connected between pins 2 and 3,which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

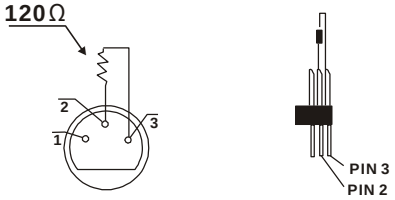

6. LCD Display Operations

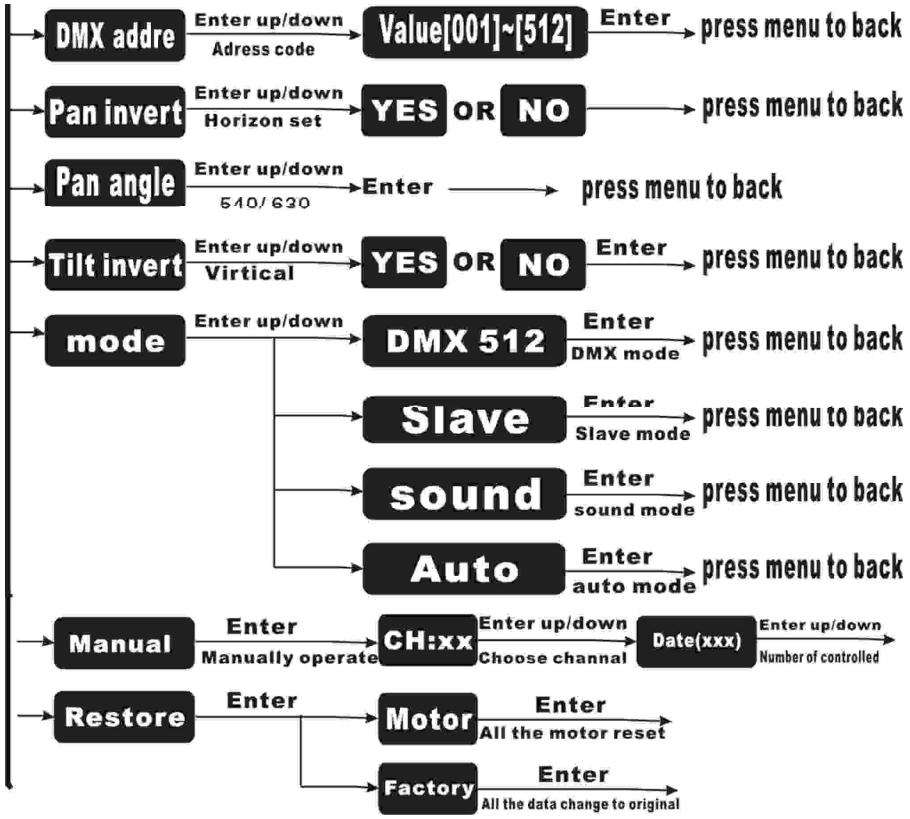

The display will close after 30 seconds without operations.